




The MimioView™ document camera works seamlessly with MimioStudio™ software to display documents, 3-D objects, and microscope slides for your entire class to view. You can use the MimioView camera to display still images or live video.

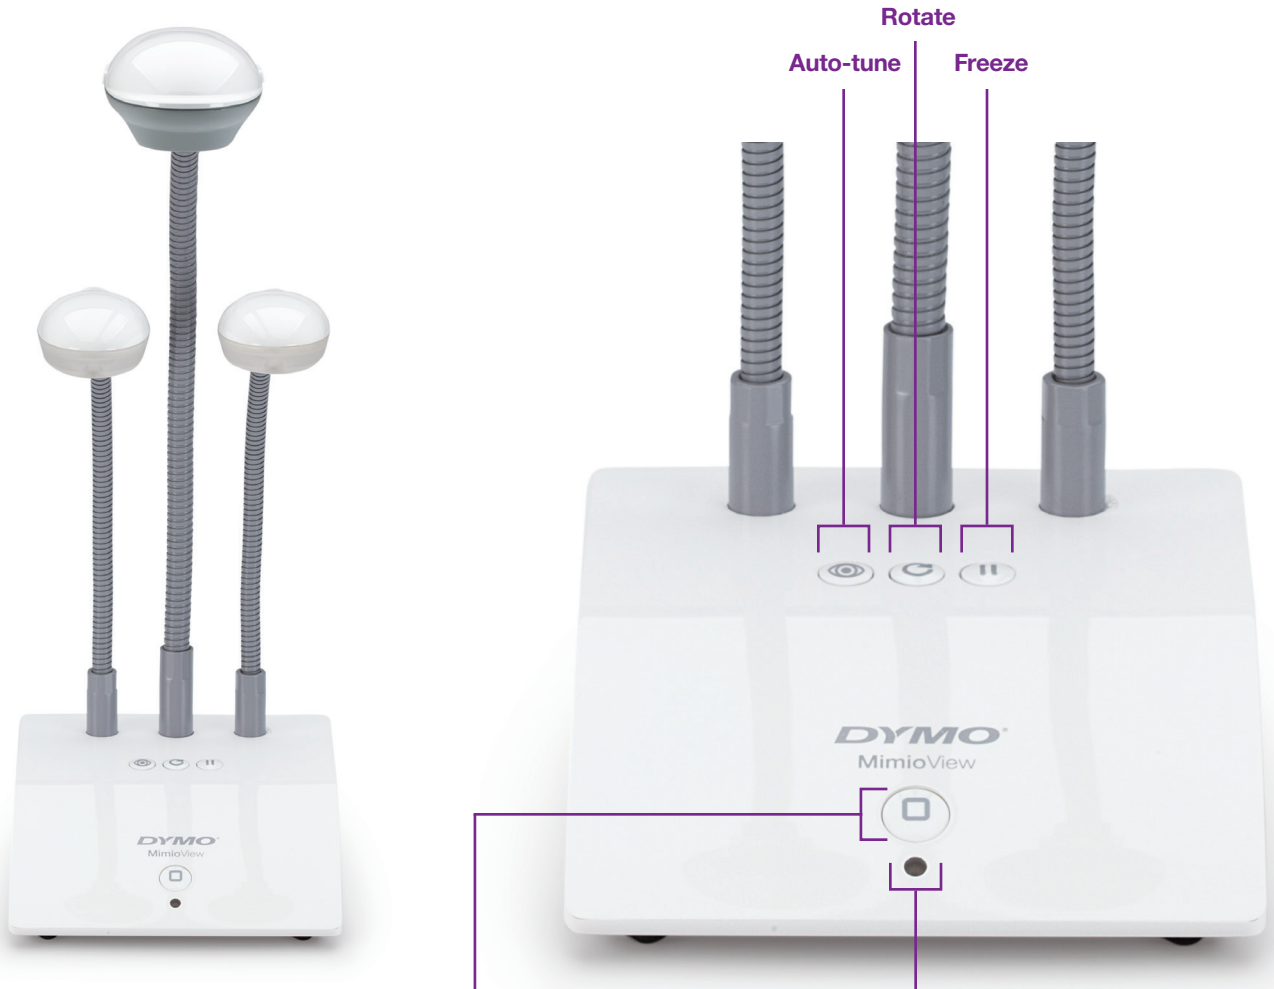

View Button

Press to open the MimioStudio View window and turn the camera and lights on.

Press again to close the MimioStudio View window and turn the camera and lights off.

Status Lights

Off: Not receiving power; USB cable is not connected or computer is turned off.

Solid Green: MimioView is connected and receiving power; MimioStudio software is running.

Flashing Green: MimioView is connected and receiving power; MimioStudio software is not running.